


#### TECHNICAL DATA

MODEL	DISPLACEMENT cfm	MAX. PRESSURE psig	FREE AIR DELIVERY cfm		SHAFT POWER hp	RPM	BELT	MOTOR PULLEY		OIL CAP. qt.	WEIGHT in lbs	INLET NPT	DISCHARGE NPT
			40 psig	90 psig				2 POLES					
								inch	mm				
MSL 15 MAX	13	125	10.0	8.5	3	1,250	1-A	4.25	108	0.540	42.8	1/2" NPSF	3/8" NPSF
	8	150	6.7	5.5	2	760		2.75	70				

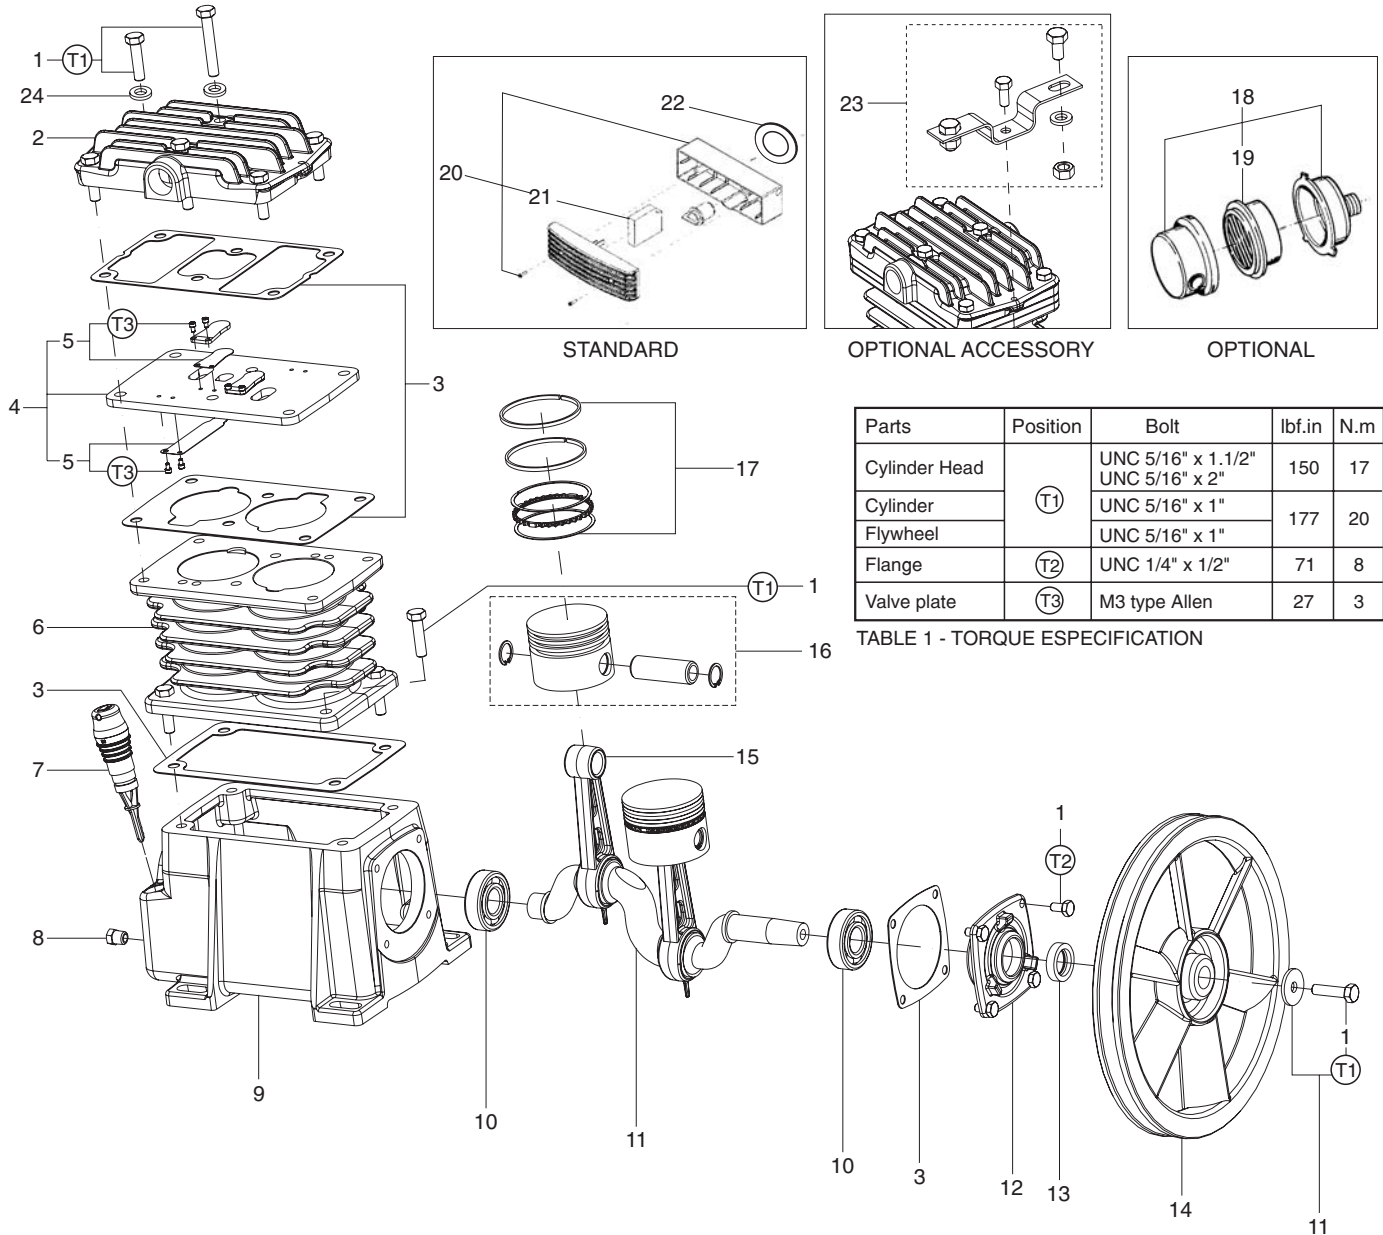

Parts	Position	Bolt	lbf.in	N.m
Cylinder Head	T1	UNC 5/16" x 1.1/2"	150	17
		UNC 5/16" x 2"		
Cylinder	T1	UNC 5/16" x 1"	177	20
Flywheel		UNC 5/16" x 1"		
Flange	T2	UNC 1/4" x 1/2"	71	8
Valve plate	T3	M3 type Allen	27	3


TABLE 1 - TORQUE ESPECIFICATION

#### BARE PUMP PARTS

No.	CODE	DENOMINATION	QTY	No.	CODE	DENOMINATION	QTY
1	830.0970-0	Bolt kit	01	13	023.0320-0	Oil seal	01
2	709.1315-0	Aluminium cylinder head	01	14	709.1350-0	Flywheel (300 mm)	01
3	830.0971-0/NA	Gasket kit	01	15	709.1261-0	Connecting rod	02
4	809.1012-0	Valve plate	01	16	016.0116-0	Ø 2.1/2" Piston	02
5	830.0972-0	Valve plate kit	01	17	830.0983-0	Ring kit (kit is for 1 cylinder)	02
6	709.1259-0	Cylinder	01	18	007.0157-0	Air filter	01
7	809.1100-0	Oil level dipstick	01	19	60318003	Filter element	01
8	003.0028-4	1/4" plug	01	20	809.1016-0	Air filter	01
9	709.1262-0	Crankcase	01	21	007.0122-0	Filter element	01
10	019.0002-1	6204 Bearing	02	22	023.0286-0/NA	Washer	01
11	830.0973-0	Crankshaft	01	23	830.0994-0	Assembly belt guard kit	01
12	709.1257-0	Flange	01	24	001.0023-4	5/16" lock washer	06

## DIMENSIONS

**MSL 15 MAX**

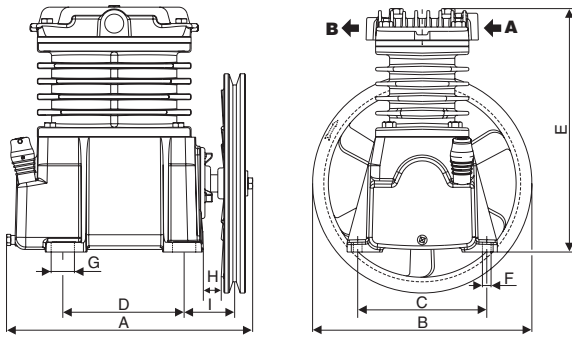

	A	B	C	D	E	F	G	H	I
<b>mm</b>	285	300	149,5	140,5	282	10	27	21	58,5
<b>inch</b>	11.2	11.8	5.9	5.53	11.1	0.4	1.06	0.83	2.3

Note: **A** suction / **B** discharge (optional)

## INSTALLATION AND OPERATION INSTRUCTIONS

### INSTALLATION AND LOCATION

**1. Installation:** Install the compressor in a covered, well ventilated area, free of dust, toxic gases, humidity or any other kind of pollution. The compressor should be located no closer than 32" (800mm) from a wall or any other obstacle that could interfere with the air flow through the fan. This distance will also make maintenance easier. Place the compressor on a leveled surface. Rotation of the flywheel must be in the direction of the arrow cast into the flywheel. The maximum ambient temperature recommended while working is 104°F or 40°C. If necessary, install an exhaust fan to guarantee fresh air and to dissipate heat.

Before making the electrical connections, check oil level and top-up lubricating oil. For type of oil, see table at the end of these instructions.

**2. Electrical connection:** The country's valid electrical standards must be followed regarding Low Voltage Electrical Installation.

### OPERATION

**1. Initial start procedure:** Before turning on the compressor, check the crankcase oil level. It must be between the dipstick's maximum and minimum marks. As to the type of oil to be used and the recommended change intervals, check at "Lubrication" and as to its volume, check the Technical Data Table.

**2. Start:** Turn on the electrical start key and let your compressor run for about 10 (ten) minutes, what will keep the tank's internal pressure or compressed air around 20 psig. This will optimize a homogeneous lubrication of the parts.

## LIMITED WARRANTY

All component parts on your SCHULZ compressor are warranted to be free of defects in workmanship and material for a period of one year. Transportation charges are responsibility of the purchaser. This warranty extends to the original purchaser of the compressor only.

There are no express warranties except as contained in this limited warranty statement and implied warranties, including those of merchantability and fitness for a particular purpose, are limited to the period of warranty.

Our liability is limited solely to replacement of nonconforming parts as set forth herein and does not include any liability for any incidental, consequential, or other damages of any kind. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

# SCHULZ

Schulz of America, Inc.  
 3420 Novis Pointe  
 Acworth, GA 30101  
 Phone # (770) 529-4731 / 32  
 Fax # (770) 529-4733  
 sales@schulzamerica.com  
 www.schulzamerica.com

## MAINTENANCE

### WARNING

Turn off power before servicing and be sure the air tank is unloaded. These instructions are based on normal operating conditions. If the compressor is located in an exceedingly dusty area, increase the frequency of all inspections.

### DAILY

- Inspect the compressor visually.
- Check oil level and add some if necessary, before turning the compressor on.
- Drain moisture from the piping system.
- Be sure there is no excessive or unusual vibration or noise.

### WEEKLY

- Remove and clean intake air filters; do not wash the filter element.
- Check V-belt for tightness. Belt tension should be adjusted to allow approximately 3/8" to 1/2" (9 to 13 mm) deflection with normal thumb pressure.
- Clean cylinders externally, cylinder head, motor, fan blade, tubing, and tank.
- ASME safety valve should be tested manually to see if it is working properly.

### MONTHLY

- Check entire system for air leakage around fittings, etc by using water and soap lather.
- Check the pressure switch operation.
- Check for oil contamination and change it if necessary.

### QUARTERLY

- Change the air filter element every 300 working hours or quarterly. (Whichever occurs first).
- Fasten bolts and nuts as required. (See table 01)
- Change oil more frequently if compressor is located in a very dirty environment.
- **WHILE RUNNING IN A PERIOD OF ABOUT 100 WORKING HOURS THE OIL LEVEL SHOULD BE CAREFULLY CHECKED.**

### ANNUALLY

- Test and calibrate the pressure switch, pressure gauge and ASME safety valve according to their own technical standards. These parts must be removed from the tank and pump to be tested.
- Inspect and clean the suction and discharge valve(s) plate(s) every 1000 (one thousand) working hours (whichever occurs first), located between the cylinder and its cover and, if necessary, replace it (them) according to the operation conditions.

### LUBRICATION

- The first oil change should be made after 8 hours of operation.
- The second oil change after 40 hours of operation.
- The third and following exchanges should be made after 200 hours of operation, or 60 (sixty) days, whichever occurs first.

### NOTE:

Heavy Duty and multi-viscous oils are not adequate for Schulz air compressor's lubrication. The same applies to oils that tend to emulsify.

We recommend good industrial oil for air compressors, with rust and oxidation inhibitors and high viscosity level (from 90 to 95), SAE or ISO, as indicated in the table below:

## RECOMMENDED LUBRICANT OILS FOR SCHULZ AIR PUMPS

AMBIENT TEMPERATURE °F (°C)		
Below 32 °F Below 0 °C	32 °F to 68 °F 0 °C to 20 °C	68 °F to 104 °F 20 °C to 40 °C
SAE 10W or ISO 32	SAE 20W or ISO 68	SAE 30 or ISO 100

NOTE: Schulz reserves the right to make changes without prior notice.

## DISTRIBUTOR

